



## Drawer and False Front Adjustment Guide

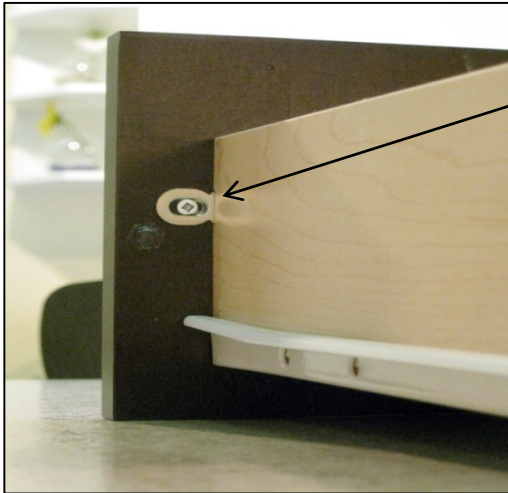

The Kitchen Craft drawer box offers a simple and effective drawer adjustment system. The fronts are attached to the box using small brackets, which allow the front a range of up and down & side to side movement. Up and down adjustments are made simply by moving the front as required - the front should be loose enough to allow movement but tight enough to maintain its position. Side to side adjustments will require the fastening screws to be loosened slightly - be sure to re-tighten the screws once the adjustments are done. Once all drawers are properly adjusted, hardware can be installed. The hardware will serve to securely fasten the front to the box, and will prevent any further movement.

False front clips hold the false drawer panels on sink base cabinets. They are easily adjusted by simply moving the front up and down to suit - the ratchet action will hold the front in place. Side to side adjustments may need the front removed to make adjustment easier - the front can be popped off by squeezing the tabs which hold the clips (pliers may be needed). Once the front is in the correct position, it can be pushed back into place.

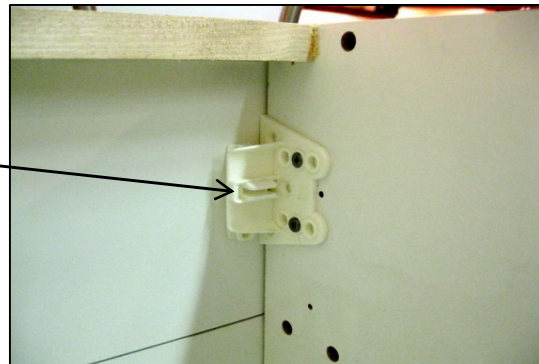

If drawer front is loose, or if the drawer front is too tight to easily move to make adjustments, remove drawer front and loosen screws attaching brackets to drawer box. Ensure bracket screws are snug, but not too tight to prevent movement of bracket.

